



Commercial Microwave

Model CE-CN-0025MV

Item 37962

Instruction Manual



Revised - 06/10/2026

Toll Free: 1-800-465-0234
Fax: 905-607-0234
Email: service@omcan.com
www.omcan.com



Table of Contents

Models CE-CN-0025MV

Section	Page
General Information -----	3 - 4
Safety and Warranty -----	4 - 7
Technical Specifications -----	8
Installation -----	9 - 10
Maintenance -----	10
Operation -----	11 - 17
Parts Breakdown -----	18 - 21
Electrical Diagrams -----	22
Troubleshooting -----	23
Notes -----	24
Warranty Registration -----	25



General Information

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcan Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, sain d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bond de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés ou cueillis par un tiers transporteur.

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les

General Information

consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre lea y familiarizarse con todas las instrucciones de funcionamiento y seguridad.

Omcan le gustaría darle las gracias por la compra de esta máquina. Es de la mayor importancia para salvar estas instrucciones para futuras consultas. Además, guarda la caja original y el embalaje para el envío del equipo si servicio técnico o devolución de la máquina que se requiere.

Safety and Warranty

Read these instructions carefully before using your microwave oven, and keep it carefully. If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

Safety and Warranty

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

IMPORTANT SAFETY INSTRUCTIONS WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. (For appliance with type Y attachment).
3. **Warning:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
4. **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
5. **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
6. **WARNING:** Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
7. **WARNING :** The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
8. Only use utensils that are suitable for use in microwave ovens.
9. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
10. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
12. The oven should be cleaned regularly and any food deposits should be removed.
13. The appliance must not be cleaned with a water jet. (for appliances intended to stand on the floor and which are not at least IPX5)

Safety and Warranty

14. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
15. Only use the temperature probe recommended for this oven.(for ovens provided with a facility to use a temperature-sensing probe.)
16. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
17. Metallic containers for food and beverages are not allowed during microwave cooking.

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

DANGER

- Electric Shock Hazard
- Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

- Electric Shock Hazard
 - Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.
 - This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.
 - This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.
 - Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.
 - If it is necessary to use an extension cord, use only a 3-wire extension cord.
1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
 2. If a long cord set or extension cord is used:
 - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - The extension cord must be a grounding-type 3-wire cord.
 - The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

UTENSILS

Caution - Personal Injury Hazard

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.


Safety and Warranty

4. Do not exceed 1 minute cooking time.

		Utensils	Remarks
Microwave Safe Materials		Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be placed smoothly on the ceramic board. Incorrect usage may cause the ceramic board to break.
		Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
		Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
		Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
		Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
		Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
		Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
		Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
		Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package
		Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
		Thermometers	Microwave-safe only (meat and candy thermometers).
		Wax paper	Use as a cover to prevent splattering and retain moisture.
Microwave Unsafe Materials		Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
		Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
		Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
		Metal twist ties	May cause arcing and could cause a fire in the oven.
		Paper bags	May cause a fire in the oven.
		Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
		Wood	Wood will dry out when used in the microwave oven and may split or crack.

Technical Specifications


Item Number	37962
Model	CE-CN-0025MV
Electricals	120 V / 60 Hz / 1 Ph
Amperage	Max: 15A
Plug Type	NEMA 5-15P
Timer	0-60 Minutes
Microwave Input	1550W
Microwave Output	1000W
Microwave Frequency	2450MHz
Capacity (Litre/Cu.ft)	25L/0.9Cu.ft
Net Dimension (W*D*H)	20" x 17" x 12" (511*432*311 mm)
Net Weight	32.4 lb (14.7 kg)
Shipping Dimension	22" x 18" x 14" (581*478*380 mm)
Shipping Weight	16.5 KG

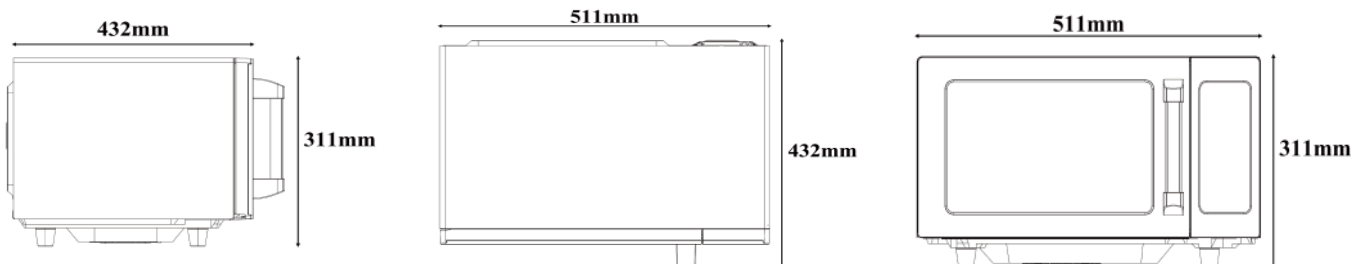

Installation

SETTING UP YOUR OVEN

Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories:

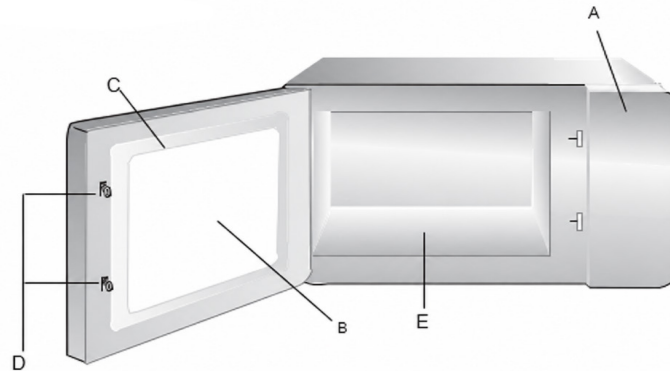

A) Control panel B) Observation window C) Door assembly D) Safety interlock system E) Ceramic board

Note:


1. Don't press the ceramic board forcibly.
2. Take and put the utensils gently during the operation in order to avoid damage to the ceramic board.
3. After using it, don't touch the ceramic board by hand in order to avoid high temperature scald

COUNTERTOP INSTALLATION

1. Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.
2. Cabinet: Remove any protective film found on the microwave oven cabinet surface.

MIRCROWAVE INSTALLATION

Select a level surface that provide enough open space for the intake and/or outlet vents (Figure1).

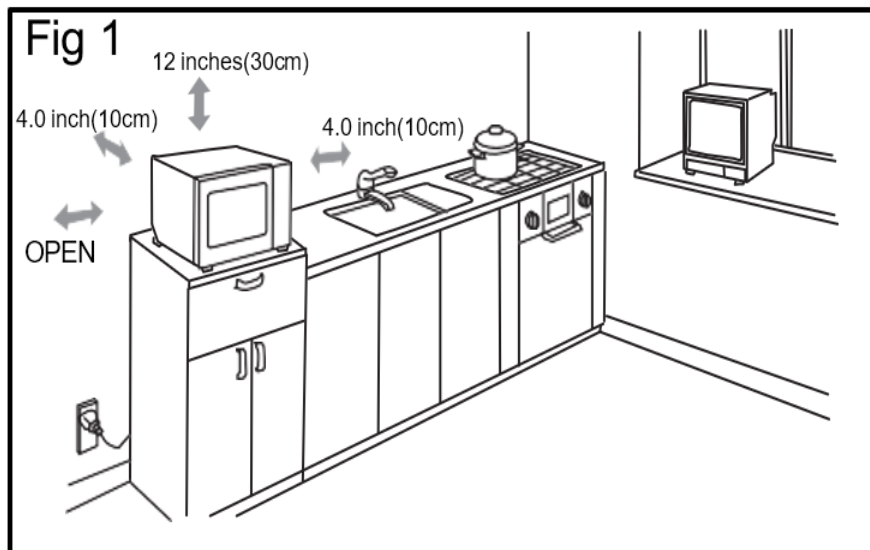

Installation

- A 10-cm spacing should be kept between the appliance and right and back walls, and a 30-cm spacing kept on the top. Never dismantle the appliance's feet, nor block the air intake and exhaust opening. The left side must be open.
- Blocking the intake and/or outlet openings can damage the oven.
- Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
- Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.
- **WARNING:** The plug socket, electric appliances or the appliance which are liable effected by heat and moisture should be kept away from any vents on the oven.

Maintenance

Be sure to unplug the appliance from the power supply.


1. Clean the inside of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighboring parts must be cleaned carefully with a damp cloth when they are dirty.

Always keep the oven clean.

1. Cleaning the glass viewing window, the inner door panel and oven front face. For best performance and to maintain the high degree of safety, the inner door panel and oven front face should be free of food or grease build-up. Wipe these parts with a mild detergent, rinse and wipe dry. Never use abrasive powders or pads.
2. Cleaning the control panel and plastic parts.
 - Do not apply a detergent or an alkaline liquid spray to the control panel and plastic parts, as this may cause damage to these parts.
 - Use a dry cloth (not a soaked cloth) to clean these parts.
3. Cleaning the oven interior. After use be sure to clean up spilled liquids, spattered oil and food debris as quickly as possible. If the oven is used when dirty, efficiency drops and the dirt gets stuck on the oven surface and may cause bad odours. Clean the interior with a cloth soaked in luke-warm water with a mild detergent dissolved in it, then rinse the soap off with a damp cloth.

CAUTION: Do Not wipe plastic and painted sections of the oven with bleach, thinners or other cleaning agents, as this may cause these parts to dissolve or change shape.

Control Panel and Features:

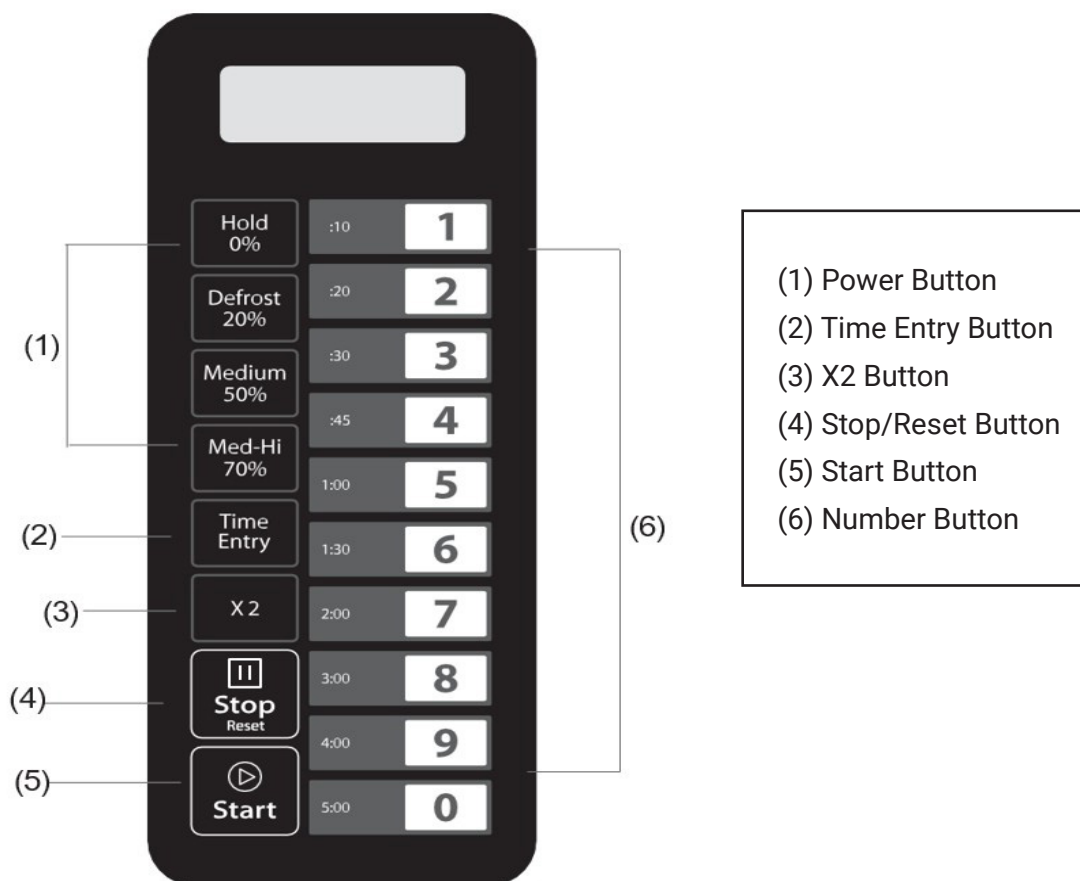

Five power levels are available.

Level	High	M.High	Med.	Defrost	Hold
Power	100%	70%	50%	20%	0%
Display	PL10	PL7	PL5	PL2	PL0

Appendix. A: User Options

Items bolded below are the default values.

Operation

Option	Setting	Description
1 EOC Tone	OP:10	3 Seconds Beep
	OP:11	Continuous Beep
	OP:12	5 Quick Beeps, Repeating
2 Beeper Volume	OP:20	Beeper Off
	OP:21	Low
	OP:22	Medium
	OP:23	High
3 Beeper On/Off	OP:30	Keybeep Off
	OP:31	Keybeep On
4 Keyboard Window	OP:40	15 Seconds
	OP:41	30 Seconds
	OP:42	60 Seconds
	OP:43	120 Seconds
5 On The Fly	OP:50	On-The-Fly Disable
	OP:51	On-The-Fly Enable
6 Door Reset	OP:60	Door Reset Disable
	OP:61	Door Reset Enable
7 Max time	OP:70	60 Minute Maximum Cook Time
	OP:71	10 Minute Maximum Cook Time
8 Manual Programming	OP:80	Manual Programming Disable
	OP:81	Manual Programming Enable
9 Double Digit	OP:90	Single Digit Mode-10 Programs
	OP:91	Doule Digit Mode-100 Programs

Appendix. B Default Cook Times

The oven shall ship with the following Preset Cook Times unless otherwise noted in the product specification.

Button	Display	Power	Cook Factors
1	0:10	100%	80%
2	0:20	100%	80%
3	0:30	100%	80%
4	0:45	100%	80%
5	1:00	100%	80%
6	1:30	100%	80%
7	2:00	100%	80%
8	3:00	100%	80%
9	4:00	100%	80%
0	5:00	100%	80%

1. Power Up

" _ _ _ _ " displays when the oven is electrified for the first time. If  button pressed, the oven will change to idle mode.

Note: Under idle mode, no button can be pressed.

2. Idle Mode

- Entry. The oven shall enter idle mode after a set of seconds have expired in Ready Mode without a keyboard press or a door open and close. The number of seconds is determined by the keyboard Timeout Window, set by User Option 4.
- During idle mode, LED is blank. And there shall be no oven activity.
- Opening and then closing the oven door, the oven will exit the idle mode and into ready mode.

3. Ready Mode

- Opening and closing the door while the oven is in Idle Mode will put the oven into Ready Mode.
- During Ready Mode, "0:00" displays.
- From the Ready Mode, the oven can go to almost all of the other modes.
- Only the fan and lamp work.

4. Door Open Mode

- While the door of the oven is open, the oven shall be in Door Open Mode.
- During this mode, LED is blank. And the fan and oven lamp work.
- When the door is closed, if User Option OP:60 is selected and the oven was running a manual or preset

Operation

cook cycle, the oven shall enter Pause Mode.

- In all other cases, the oven shall return to Ready Mode with User Option OP:61 set, opening and closing the door will clear out any information about a Manual or Preset Program which was running.

5. Pause Mode

- While in Manual Cook Mode, or Preset Program Cook Mode, if the door is open or closed, or if the  pad is pressed, the oven will enter Pause Mode.

- While paused, LED will display the remaining cooking time.
- Only the fan and lamp work.
- Pause Mode will expire back to Idle Mode in the exact fashion as Ready Mode, dependent on User Option 4.

- Additionally, if the  button is pressed, the oven shall immediately enter Ready Mode. OR if

press  button, the oven will go into working mode.

6. Manual Cook Entry Mode

- While the oven is in the Ready Mode, pressing the “Time Entry” pad on the keyboard will put the oven into Manual Cook Entry Mode.
- During this mode, “00:00” displays.
- If you press “Hold 0%”, “Defrost 20%”, “Medium 50%”, or “Med-Hi 70%”, button to select power level, LED will display the related power. If the same button pressed twice, the power will change to PL10. If no power chosen, “PL10” is default.
- Only the fan and lamp work.
- During setting process, press  to enter Manual Cook Mode. Press  to enter Ready Mode.

7. Manual Cook Entry Mode

- Pressing the  pad will cause to the oven to begin Manual Cook Mode.
- During this mode, remaining cooking time displays. The fan and oven lamp will work.
- When cooking program finish, the oven will enter End of Cook Cycle Mode. If you press  button under this mode, the oven will enter Pause Mode.

8. End of Cook Cycle Mode

- After the time has expired in a Manual Cook Mode, or a Preset Program Cook Mode, the oven shall go into The End of Cook Cycle Mode.
- During this mode, “End” displays.
- If either User Option OP:11 or “OP:12” is selected, the oven shall continue to sound until the user ac

knowledges this by either opening and closing the door or pressing the  pad. If User Option

OP:10 is selected, after the 3 seconds beep, the oven shall go into Ready Mode.

9. Preset Program Cook Mode

- This mode allows cooking of food items through a one pad touch operation. While in Ready Mode, pressing one of ten digit keys on the keyboard will cause the oven to run the Preset Program associated with that key.
- LED displays the remaining cooking time. If it is multi-stage cooking, the total remaining cooking time displays not a particular stage cooking time.
- When cooking program finish, the oven will enter End of Cook Cycle Mode. If you press  button under this mode, the oven will enter Pause Mode.

10. On The Fly Cooking

- While the oven is cooking or under Pause Mode, if User Option OP:51 is selected press number buttons, the preset cooking program will start automatically.
- LED displays the remaining cooking time.
- When cooking program finish, the oven will enter End of Cook Cycle Mode.
- If you press  button under this mode, the oven will enter Pause Mode.

11. Programming Mode

This mode allows the user to assign cook times and power levels to the once touche button.

- Open the door and press "1" for 5 seconds, the buzzer will sound once and enter to Programming Mode.
- "ProG" displays.
- Press any number, 0 to 9, and the LED will display the saved time, then you can input the time you need.
- Press "Hold 0%", "Defrost 20%", "Medium 50%", or "Med-Hi 70%", to input the power level. LED will display the related power. If the same button pressed twice, the power will change to PL10. If no power chosen, "PL10" is default.
- To change the cooking factors: If press "X2", LED will display "CF:XX". The default factor is 80%. "CF:80" displays. If you need to change the cooking power, just press one of the number buttons to set.
- After setting the time and power, press  in 30s, the cooking program will be saved. When the program saved, "ProG" displays.
- If all the cooking time exceeds the MAX.time User Option 7, when press  to save the program,

the buzzer will sound three times briefly to tell you the time is no use. And then LED turn back to show "ProG". The time set before will be no change.

- Close the door, the oven will turn back to Ready Mode. If press  button during setting process, the oven turn to Door Open Mode.
- The program that not saved will be lost. If there is program saved as memory procedure, press the related number button, the saved program will start. If no saved program, the buzzer will alarm when pressing number button and it will not work.

For example: set the program as memory cooking.

Program; Power level PL7 and cooking time is 1 minute and 25 seconds.

- Step 1: In ready state, press number button "1" for 5 seconds, "ProG" displays.
- Step 2: Press number button "3", the program will be saved in "3".
- Step 3: Press number buttons "1", "2" and "5" to input the cooking time.

Operation

- Step 4: Press "Medi-Hi 70%" button, "PL7" displays. Setting finished.
- Step 5: Press  to save. When use the program next time, just press "3", the related program will start.

Note:

1. If the electricity is cut off, the saved program will not lost.
2. If the program need to reset , just repeat the aboved steps.
3. If press  at the last step, it will turn back to Ready Mode. The setting will be no use.

12. Double Quantity Cooking

- Under ready state, press "X2" button and then press number buttons 0-9 in 5 seconds, the oven will start cooking with the quantity preset cooking time.
- Press "X2", "doub" displays. When press number buttons, LED will display the quantity preset time.
- For example, number button "5" and its preset time is 1 minute. Then press "X2", then time will change to $1:00 \times (1+0.8) = 1:48$
- When cooking program finish, the oven will enter End of Cook Cycle Mode.

13. Stage Cooking Programming

This allows the user to cook food items at combination of various Power Levels.

1. Three stages can be set at most under cooking mode or memory mode. After setting the power and time for the first stage, press "Time Entry" to set the second stage. And the same step to set the third stage.
2. When setting the second or the third stage, press "Time Entry", "S-2" or "S-3" displays.
3. Press  button to start cooking.

Example: To set three stages as memory mode. The first stage is PL7 and time is 1 minute 25 seconds. The second stage is PL5 and 5 minutes and 40 seconds. The steps are followed.

- a. Ready state, press "1" for 5 seconds, LED displays "ProG".
- b. Press number buttons "3" to save the program in "3".
- c. Press "1","2","5" to input the cooking time. "1:25" displays.
- d. Press "Med-Hi 70%", "PL7" displays. The first stage is finished.
- e. Press "Time Entry", LED displays "S-2".
- f. Press "5", "4", "0" button, "5:40" displays.
- g. Press "Medium 50%", "PL5" displays. The second stage is finished.
- h. Press  to save the program.

14. Use Option Mode

1. Open the oven door and press "2" for 5 seconds. The buzzer sounds once and enter this mode.
2. LED displays "OP: - -".
3. Press any number button to enter related mode setting.
For example: to set the voice of the buzzer to medium. Press "2", "OP:22" displays.
If you want to change, keep pressing "2", LED displays "OP:20", "OP:21", "OP:22", "OP:23", and "OP:20" in cycle.

Operation

4. Press  to save the current setting. After saved, "OP: - -" display again.
5. During setting process, press  to enter Door Open Mode. Close the door will enter Ready Mode.
6. If  button not pressed at the last step, the program cannot be saved but stay at previous way.

15. Service Mode

1. Open the oven door and press "3" for 5 seconds to enter service mode.
2. LED displays "SErU".
3. To check the times of closing or opening the door, just press number button "1", LED will display the times.
4. Press  and then press number button "4" in 3 seconds, the message will be cancelled. "4-CL" displays
5. Press  to enter Door Open Mode. Close the door will enter Ready Mode.

16. Inquiry Function

During microwave cooking process, press "Time Entry" to check the power level. LED display the power for 3 seconds then turn back to previous state. It is available for multi-stage cooking.

17. Factory-Default Setting

In power up and ready mode, press  and "o" to factory--default setting.


Parts Breakdown

Model CE-CN-0025MV 37962

Item No.	Description	Position	Item No.	Description	Position
AX181	WATER SEALING FOR MICROWAVE 37962	Z40	AX209	SCREW ST3*8PWBHC FOR MICROWAVE 37962, 37963	S02
AX182	GUARD OIL FOR MICROWAVE 37962	Z29	AX210	SCREW CT3*8BBHC FOR MICROWAVE 37962, 37963	S01
AX189	CASE OUT FOR MICROWAVE 37962, 37963	Z24	AX211	HARNESS MAIN FOR MICROWAVE 37962, 37963	L05
AX190	FAN STIRRER FOR MICROWAVE 37962	Z11	AX212	MICROSWITCH MONITOR FOR MICROWAVE 37962, 37963	L04
AX191	HOLDER H.V.C FOR MICROWAVE 37962, 37963	Z01	AX213	MICROSWITCH INTERLOCK FOR MICROWAVE 37962, 37963	L03
AX192	DAMPER FOR MICROWAVE 37962, 37963	W06	AX214	LEVEL SWITCH FOR MICROWAVE 37962, 37963	L02
AX193	MOTOR FAN FOR MICROWAVE 37962, 37963	W03	AX215	BOARD LATCH FOR MICROWAVE 37962, 37963	L01
AX194	FAN FOR MICROWAVE 37962, 37963, 37963	W02	AX216	THERMOSTAT 160°C/95°C FOR MICROWAVE 37962, 37963	E35
AX195	GUIDE FAN FOR MICROWAVE 37962, 37963	W01	AX217	POWER CORD ASSEMBLY FOR MICROWAVE 37962, 37963	E16
AX196	SHAFT STIRRER FOR MICROWAVE 37962	T09	AX218	THERMOSTAT 110°C/70°C FOR MICROWAVE 37962	E40
AX197	MOTOR TRAY FOR MICROWAVE 37962, 37963	T01	AX219	LAMP FOR MICROWAVE 37962	E13
AX198	SPRING WASHER FOR MICROWAVE 37962	S21	AX220	FUSE FOR MICROWAVE 37962, 37963	E11
AX199	SCREW 4*6 FOR MICROWAVE 37962	S18	AX221	FILTER NOISE FOR MICROWAVE 37962, 37963	E10
AX200	SCREW ST3*10PWTHC FOR MICROWAVE 37962	S17	AX222	HIGH VOLTAGE DIODE FOR MICROWAVE 37962, 37963	E07
AX201	SCREW CT4*8TBHC FOR MICROWAVE 37962	S08	AX223	HIGH VOLTAGE CAPACITOR FOR MICROWAVE 37962, 37963	E06
AX202	SCREW CT4*8TBHC FOR MICROWAVE 37962	S07	AX224	HIGH VOLTAGE TRANSFORMER FOR MICROWAVE 37962	E05
AX203	SCREW ST4*20TBHC FOR MICROWAVE 37962	S06	AX225	MAGNETRON FOR MICROWAVE 37962, 37963	E01
AX204	SCREW ST4*12PWBHC FOR MICROWAVE 37962	S05	AX226	HINGE BRACKET ASSEMBLY FOR MICROWAVE 37962, 37963	B03
AX205	SCREW ST4*10TBHC FOR MICROWAVE 37962	S04	AX227	LEG FOR MICROWAVE 37962	B02
AX206	BASE PLANT FOR MICROWAVE 37962	B01	AX228	PRANT COVER FOR MICROWAVE 37962	A09
AX207	ASSEMBLY CAVITY FOR MICROWAVE 37962	A00	AX229	GUIDE WIND FOR MICROWAVE 37962	W04
AX208	SPONGE FOR MICROWAVE 37962	Z22			

Parts Breakdown

Model CE-CN-0025MV 37962

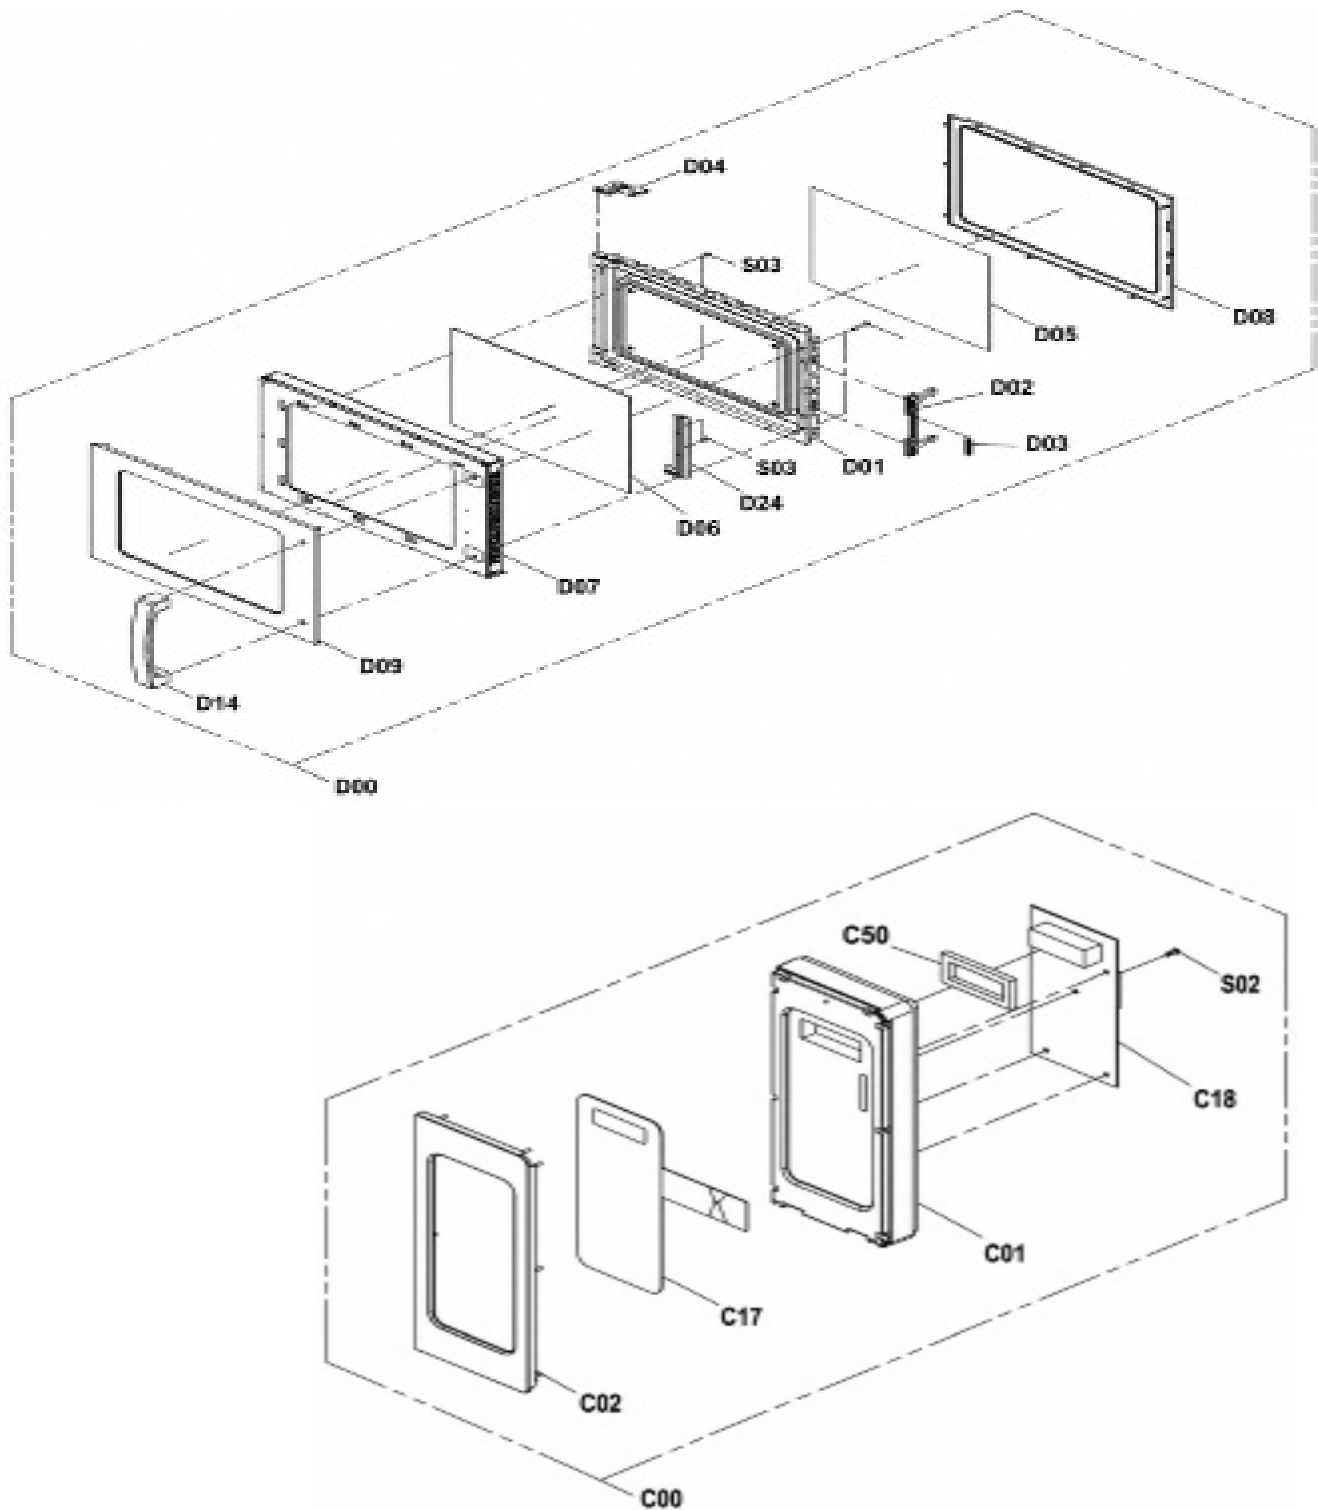


Parts Breakdown

Model CE-CN-0025MV 37962

Item No.	Description	Position	Item No.	Description	Position
AX230	SCREW ST4x30PBHC FOR MICROWAVE 37962	S35	AX240	UPPER HINGE FOR MICROWAVE 37962, 37963	D04
AX231	SCREW ST4x8PBHC FOR MICROWAVE 37962	S03	AX241	LATCH SPRING FOR MICROWAVE 37962, 37963	D03
AX232	HANDLE FOR MICROWAVE 37962, 37963	D14	AX242	LATCH FOR MICROWAVE 37962, 37963	D02
AX233	DOOR DECORATION FOR MICROWAVE 37962	D06	AX243	DOOR FRAME ASSEMBLY FOR MICROWAVE 37962, 37963	D01
AX234	DOOR GASKET FOR MICROWAVE 37962, 37963	D08	AX244	DOOR FOR MICROWAVE 37962, 37963	D00
AX235	DOOR PANEL FOR MICROWAVE 37962, 37963	D07	AX209	SCREW ST3x8PBHC FOR MICROWAVE 37962	S02
AX236	DOOR SCREEN FOR MICROWAVE 37962, 37963	D06	AX246	SEALING RING FOR MICROWAVE 37962, 37963	C50
AX237	DOOR INNER FILM FOR MICROWAVE 37962, 37963	D05	AX247	PCB ASSEMBLY FOR MICROWAVE 37962, 37963	C18
AX238	MEMBRANE SWITCH FOR MICROWAVE 37962, 37963	C17	AX248	CONTROL PANEL FOR MICROWAVE 37962, 37963	C01
AX239	CONTROL PANEL DECORATION FOR MICROWAVE 37962, 37963	C02	AX249	CONTROL PANEL ASSEMBLY FOR MICROWAVE 37962, 37963	C00

Electrical Diagram


Model CE-CN-0025MV 37962

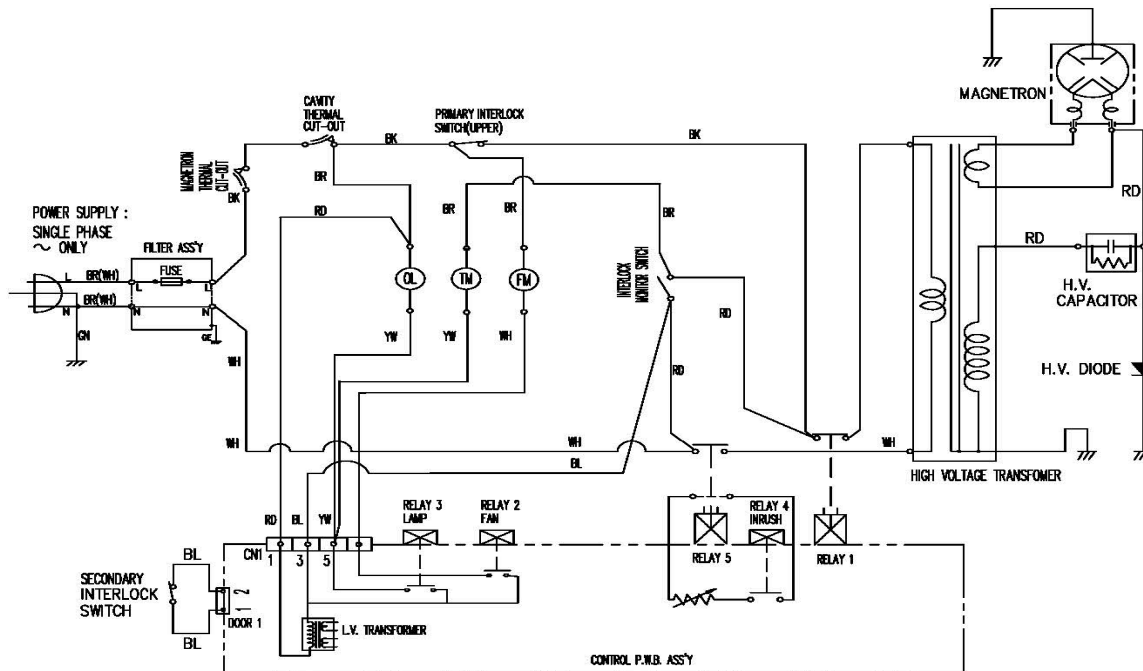

[CONDITION]
DOOR : CLOSED
COOK : OFF

NOTE :
OL : OVEN LAMP
FM : FAN MOTOR
TM : TRAY MOTOR

BK : BLACK
RD : RED
WH : WHITE
YW : YELLOW
BL : BLUE
BR : BROWN
GN : GREEN
GE : YELLOW/GREEN

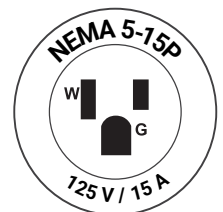

Troubleshooting

NORMAL	
Microwave oven interfering with TV reception	Radio and TV reception may interfere when microwave oven operating. It is like the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out of vents. But some may accumulate in a cool place like oven door. It is normal.
Oven started accidentally with no food in	It is forbidden to run the unit without any food inside. It is very dangerous.

PROBLEM	POSSIBLE CAUSES	SOLUTION
Oven cannot be started	(1) Power cord is not plugged in tightly	Unplug. Then plug again after 10 seconds
	(2) Fuse blowing or circuit breaker works	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet	Test outlet with other electrical appliances
Oven does not heat	(4) Door is not closed well	Close door well



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product, please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

<https://omcan.com/warranty-registration/>

For mailing in Canada

Pour postale au Canada

Por correo en Canadá

For mailing in the US

Pour diffusion aux États-Unis

Por correo en los EE.UU.

OMCAN

PRODUCT WARRANTY REGISTRATION

3115 Pepper Mill Court,
Mississauga, Ontario
Canada, L5L 4X5

OMCAN

PRODUCT WARRANTY REGISTRATION

4450 Witmer Industrial Estates, Unit 4,
Niagara Falls, New York
USA, 14305

or email to: service@omcan.com



Purchaser's Information

Name: _____

Address: _____

City: _____ Province or State: _____ Postal or Zip: _____

Country: _____

Dealer from which Purchased: _____

Dealer City: _____ Dealer Province or State: _____

Invoice: _____

Company Name: _____

Telephone: _____

Email Address: _____

Type of Company:

☐ Restaurant ☐ Bakery ☐ Deli

☐ Butcher ☐ Supermarket ☐ Caterer

☐ Institution (*specify*): _____

☐ Other (*specify*): _____

Model Name: _____ Model Number: _____ Serial Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____ Date of Installation (MM/DD/YYYY): _____

Would you like to extend the warranty? ☐ Yes ☐ No

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 6,500 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 6500 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 6,500 productos con origen a nivel mundial.

